



READ THESE INSTRUCTIONS CAREFULLY BEFORE INSTALLING THIS FIXTURE.

This system is intended for installation in accordance with the National Electrical Code (NEC) and local code specifications. Failure to adhere to these codes and instructions may result in serious injury and/or damage to the fixture and will void the warranty. These instructions do not purport to cover all the details or variations in equipment, nor to provide for every possible contingency related to installation, operation, maintenance, or mounting situation. If specific problems occur that are not covered by these instructions, contact your distributor for assistance. Retain these instructions for future reference.

⚠ SAFETY WARNING:

ALWAYS TURN OFF/DISCONNECT POWER AND ALLOW TO COOL BEFORE PERFORMING ANY MAINTENANCE, INCLUDING RELAMPING AND CLEANING!

This fixture can become very HOT! The fixture housing and lens, especially if it is glass, can become hot enough to blister hands. Attention should be paid to where the fixture is mounted, particularly if it can be touched by children or pets. To help prevent premature failure, decreased performance, overheating and risk of fire, keep fixture and lens clean and free of leaves, mulch, debris, and mineral deposits from water. Do not operate fixture with a missing or damaged lens/lens assembly. Contact only switch or plug when turning fixture on or off. Do NOT touch hot lens or housing. Turn off or unplug fixture and allow to cool before relamping. Keep lamp away from combustibles. Do NOT touch lamp with bare hands at any time. Use a soft cloth since oil from skin may damage lamp. The fixture and lens can be cleaned using a soft cloth and a solution of mild liquid soap and warm water. Wipe clean and dry with a soft, lint-free dry cloth. Avoid polishing fixture or lens.

FOR USE ONLY WITH LOW VOTAGE LANDSCAPE LIGHTING POWER UNITS THAT ARE RATED MAXIMUM 25 AMPS, 15 VOLTS PER CIRCUIT.

Do not install fixture within 10 feet (1.52 meters) of a pool, spa or fountain.

INSTALLATION INSTRUCTIONS

1. Make sure power is turned OFF before installing or servicing this fixture.
2. Loosen set screw on side of fixture cover and remove cover from backplate.
3. Position backplate on mounting surface and mark hole locations for the fixture mounting screws.
4. Drill pilot hole in wall or other mounting surface for #8 wood screws (included).
5. Reposition backplate on mounting surface and install (2) #8 wood screws.
6. Install specified lamp (included).
7. Install cover and tighten set screw on the side.
8. Turn power ON.