



READ THESE INSTRUCTIONS CAREFULLY BEFORE INSTALLING THIS FIXTURE.

This system is intended for installation in accordance with the National Electrical Code (NEC) and local code specifications. Failure to adhere to these codes and instructions may result in serious injury and/or damage to the fixture and will void the warranty. These instructions do not purport to cover all the details or variations in equipment, nor to provide for every possible contingency related to installation, operation, maintenance, or mounting situation. If specific problems occur that are not covered by these instructions, contact your distributor for assistance. Retain these instructions for future reference.

CAUTION

1. **WARNING: TURN THE POWER OFF BEFORE INSTALLING OR PERFORMING ANY MAINTENANCE ON THIS FIXTURE.** Failure to do so may result in severe injury or death.
2. The housing should not be installed in insulating materials such as bark, vermiculite, etc. for the full depth of the housing. However, surface use of these materials is acceptable.
3. The fixture should not be installed in low lying areas or where water may accumulate and stand for long periods of time. Soil should be mounded up around the fixture to promote drainage.

INSTALLATION

1. Excavate soil for fixture placement. Contour the hole to the shape of the fixture housing, allowing 3" (minimum) around and under the housing for placement of gravel or granular material.
2. Connect the low voltage cable to the supply cable using the supplied low voltage connector.
3. Place the fixture into the hole, and fill the excess space with granular material. Mound up earth to the fixture flange. The fixture may also be installed in concrete.
4. Install the supplied lamp per the relamping instructions below.

RELAMPING

Make sure the power is off before relamping. Loosen the three relamping screws and remove the roof and lens. Remove the old lamp by pulling it straight out. Install the replacement lamp by pushing it straight into the socket. **WARNING: DO NOT TOUCH THE SURFACE OF THE LAMP.** Fingerprints on the lamp will cause it to fail prematurely. Clean the gasket area, and replace the lens and roof. Tighten the three screws, reconnect the power, and test for correct operation.