PHILIPS
100 Craftway Dr.
Littlestown, Pennsylvania 17340-0128
Phone: 717-359-7131

ASSEMBLY INSTRUCTIONS: BRACKET ARM RLM SHADES

THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.

1. BEFORE BEGINNING TURN OFF POWER AT CIRCUIT BREAKER.

2. IF USING OCTAGONAL OUTLET BOX, ATTACH UNIVERSAL MOUNTING BRACKET C TO OUTLET BOX B USING HARDWARE D SUPPLIED. IF USING SMALLER RECTANGULAR OUTLET BOX, GO TO STEP 3.

3. SCREW WALLPLATE E ONTO BRACKET ARM IN THE DESIRED POSITION SO SLIP HOLES ARE ALIGNED WITH THREADED HOLES IN UNIVERSAL MOUNTING BRACKET C, OR OUTLET BOX A, THEN LOCK E TO I WITH SET SCREW F.

4. WIRE FIXTURE BY CONNECTING BLACK WIRE FROM SOCKET TO THE BLACK WIRE FROM SOURCE, CONNECT WHITE WIRE FROM SOCKET TO THE WHITE WIRE FROM SOURCE, THEN, IF USING SMALL RECTANGULAR BOX, CONNECT THE GREEN WIRE FROM SOCKET TO THE BARE COPPER OR GREEN GROUND WIRE FROM SOURCE. IF USING THE LARGE OCTAGONAL BOX, STRIP INSULATION FROM GREEN SOCKET WIRE APPROX. 4", THEN LOOP WIRE NEAR END OF INSULATION AROUND GROUND SCREW ON UNIVERSAL MOUNTING BRACKET C, THEN CONNECT BARE COPPER OR GREEN GROUND WIRE FROM SOURCE TO END OF STRIPPED WIRE.

5. SECURE LAMP ASSEMBLY TO UNIVERSAL MOUNTING BRACKET C OR OUTLET BOX A WITH LOCK WASHERS G AND SCREWS H.

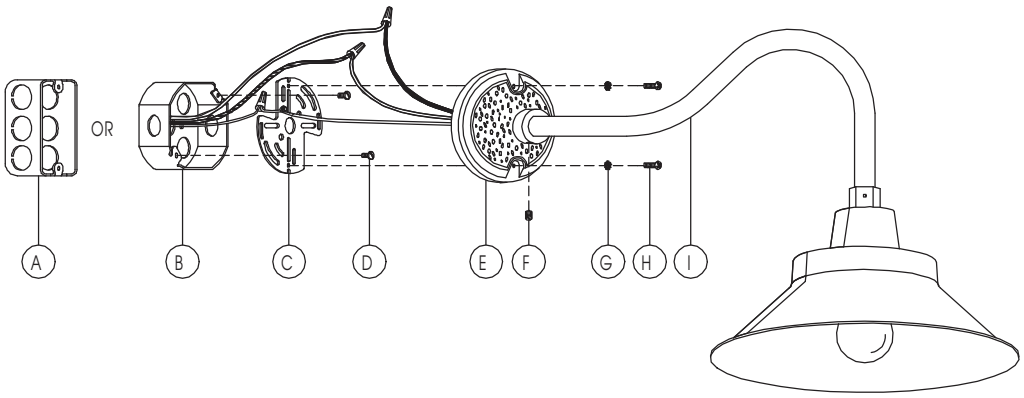

*NOTE: ITEMS A OR B SUPPLIED BY CONTRACTOR